

e-Wall AC30

ΕΛΛΗΝΙΚΑ

NOD

Universal οικιακός φορτιστής USB-A QC 3.0 & USB-C PD3.0 30W

ΕΓΧΕΙΡΙΔΙΟ ΟΔΗΓΙΩΝ

Διαβάστε προσεκτικά τις οδηγίες χρήσης πριν θέσετε τη συσκευή σε λειτουργία και φυλάξτε τις οδηγίες, την απόδειξη και εάν είναι δυνατόν το κουτί με την εσωτερική συσκευασία. Εάν δώσετε τη συσκευή σε τρίτο, παρακαλώ μεταβιβάστε και τις οδηγίες χρήσης.



ΟΔΗΓΙΕΣ ΑΣΦΑΛΕΙΑΣ

1. Πριν χρησιμοποιήσετε τον φορτιστή, βεβαιωθείτε ότι είναι συμβατός με τη συσκευή σας.

2. **ΠΡΟΕΙΔΟΠΟΙΗΣΗ:** Μην αποσυναρμολογείτε, επισκευάζετε ή τροποποιείτε τη συσκευή για κανένα λόγο. 3. Μην εκθέτετε τη συσκευή σε νερό, υγρασία ή άμεσο ήλιο. Μην αφήνετε νερό να διεισδύσει στο φορτιστή.

4. **ΠΡΟΣΟΧΗ:** Σε περίπτωση που ο φορτιστής βραχεί, ΜΗΝ τον χρησιμοποιείτε!

5. Μην τοποθετείτε τη συσκευή δίπλα σε πηγές θερμότητας (π.χ. φωτιά, ηλεκτρικές θερμάστρες, καλοριφέρ, τζάκια κ.λπ.). 6. Για να αποφύγετε την πρόκληση ζημιάς στη συσκευή, μην την πετάτε και μην την χτυπάτε.


ΕΠΙΣΚΟΠΗΣΗ ΣΥΣΚΕΥΗΣ

1. Θύρα USB-A (QC)
2. Θύρα USB-C (PD)
3. Διπολικό φις



ΧΡΗΣΗ ΤΗΣ ΣΥΣΚΕΥΗΣ

1. Διαβάστε προσεκτικά όλες τις οδηγίες και φυλάξτε τις για μελλοντική αναφορά.
2. Αφαιρέστε όλα τα υλικά συσκευασίας και κρατήστε τα μακριά από παιδιά.
3. Αφού αποσκευάσετε τη συσκευή ελέγξτε για πιθανές βλάβες. Σε περίπτωση βλάβης ή ορατού προβλήματος, μη χρησιμοποιήσετε τη συσκευή και απευθυνθείτε στο κατάστημα που το αγοράσατε.
4. Συνδέστε τον φορτιστή στην τροφοδοσία. Βεβαιωθείτε ότι η τάση του δικτύου σας είναι η ίδια με την τάση που αναγράφεται στην ετικέτα χαρακτηριστικών της συσκευής.
5. Ο φορτιστής NOD e-Wall AC20 φορτίζει με ασφάλεια δύο συσκευές ταυτόχρονα.
- Συνδέστε τη συσκευή σας (που υποστηρίζει φόρτιση μέσω USB-C Power Delivery) στην θύρα USB-C του φορτιστή μέσω καλωδίου USB (το καλώδιο USB δεν συμπεριλαμβάνεται στη συσκευασία).
- Συνδέστε τη συσκευή σας (που υποστηρίζει φόρτιση μέσω USB-A Quick Charge) στην θύρα USB-A του φορτιστή μέσω καλωδίου USB (το καλώδιο USB δεν συμπεριλαμβάνεται στη συσκευασία).

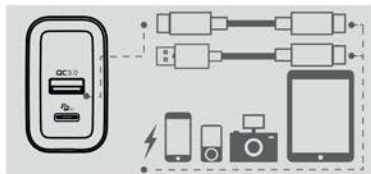

Ι ΣΗΜΕΙΩΣΗ: Όταν οι θύρες χρησιμοποιούνται ταυτόχρονα, ο φορτιστής αναγνωρίζει τις συνδεδεμένες συσκευές και βελτιστοποιεί την απόδοση φόρτισης και για τις δύο συσκευές. Ο φορτιστής θα καταναίει αυτόματα την καλύτερη ισχύ ανάλογα με τη συσκευή και όταν είναι κοντά στην πλήρη ισχύ, ο φορτιστής θα εισέλθει σε λειτουργία trickle mode.

ΚΑΘΑΡΙΣΜΟΣ

1. **ΠΡΟΣΟΧΗ:** Μην βρέχετε και μη βυθίζετε τον φορτιστή σε νερό ή οποιοδήποτε άλλο υγρό.
2. Μπορείτε να καθαρίσετε τη συσκευή με ένα στεγνό και μαλακό πανί.
3. Μην καθαρίζετε αυτή τη συσκευή με οινόπνευμα ή με οποιοδήποτε άλλο υγρό.

ΑΠΟΘΗΚΕΥΣΗ

1. Αποθηκεύετε πάντα τη συσκευή και το καλώδιο της μακριά από παιδιά.
2. Αποθηκεύετε πάντα τη συσκευή σε ασφαλές και καθαρό μέρος. Για την καλύτερη προστασία της συσκευής, αποθηκεύστε τη μέσα στην αρχική της συσκευασία.

e-Wall AC30

ENGLISH

NOD

Universal wall charger USB-A QC 3.0 & USB-C PD3.0 30W

USER MANUAL

Read the instructions for use carefully before putting the device into operation and keep the instructions, the receipt and if possible, the box with the inner packaging. If you give the device to a third party, please also pass on the instructions for use.




SAFETY INSTRUCTIONS

1. Before using the charger, make sure it is compatible with your device.
2. **WARNING:** Do not disassemble, repair or modify the device for any reason.
3. Do not expose the device to water, moisture or direct sunlight. Do not allow water to enter the charger.
4. **CAUTION:** If the charger gets wet, DO NOT use it!
5. Do not place the device near heat sources (eg fire, electric heaters, radiators, fireplaces, etc.).
6. To avoid damage to the device, do not drop or hit it.

DEVICE OVERVIEW


1. USB-A (QC) port
2. USB-C (PD) port
3. Plug



HOW TO USE

1. Read all instructions carefully and keep them for future reference.
2. Remove all packaging materials and keep out of reach of children.
3. After unpacking the device check for possible damages. In case of damage or visible problem, do not use the device and contact the store where you bought it.
4. Connect the charger to the power supply. Make sure your mains voltage is the same as the voltage on the device's rating label.
5. The NOD e-Wall AC20 charger safely charges two devices at the same time.
- Connect your device (which supports USB-C Power Delivery charging) to the charger's USB-C port via a USB cable (USB cable not included).
- Connect your device (which supports USB-A Quick Charge) to the charger's USB-A port via a USB cable (the USB cable is not included in the package).

NOTE: When the USB ports are used simultaneously, the charger recognizes the connected devices and optimizes charging performance for both devices. The charger will automatically distribute the best power according to the device and when it is close to full power, the charger will enter trickle mode.

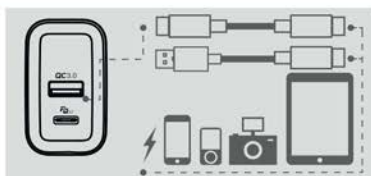

CLEANING

1. **CAUTION:** Do not wet or immerse the charger in water or any other liquid.
2. You can clean the device with a dry and soft cloth.
3. Do not clean this device with alcohol or any other liquid.

STORAGE

1. Always store the device and its cord out of the reach of children.
2. Always store the device in a safe and clean place. To best protect the device, store it in its original packaging.

Specifications	Χαρακτηριστικά
Input Voltage Output total power USB-C	100 - 240V~, 50-60Hz, 0.8A 30W (Max.) 5V-3A, 9V-3A, 12V-2.5A, 15V-2A, 20V-1.5A, PPS: 3.3V-11V-3A (30W Max.) 3.6V-6V-3A, 6V-9V-2A, 9V-12V-1.5A (18W Max.) 5V-3.4A (Max.)
USB-A USB-C + USB-A	Τύπος εισόδου Μέγιστη ισχύς εξόδου USB-C USB-A USB-C + USB-A