

LiFE



Perfect Cook

Επιτραπέζια μονή ηλεκτρική εστία, 1500W

Electric single hot plate, 1500W

ΕΛ ΟΔΗΓΙΕΣ ΧΡΗΣΗΣ
EN USER MANUAL

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS.



Read the operating instructions carefully before putting the product into operation and keep the instructions, the receipt and, if possible, the box with the internal packing. If you give this product to other people, please also pass on the operating instructions.

USER MANUAL SYMBOLS

Important information for your safety is specially marked. It is essential to comply with these instructions in order to avoid accidents and prevent damage to the machine:

⚠ WARNING: This sign warns you of dangers to your health and indicates possible injury risks.

⚠ CAUTION: This sign refers to possible hazards to the machine or other objects.

i NOTE: This sign highlights tips and information.

SAFETY INSTRUCTIONS

1. Η συσκευή μπορεί να χρησιμοποιηθεί από παιδιά ηλικίας 8 ετών και πάνω και από άτομα με μειωμένες σωματικές, αισθητηριακές ή διανοητικές ικανότητες ή από έλλειψη εμπειρίας και γνώσης, εάν επιβλέπονται ή τους έχουν δοθεί οδηγίες σχετικά με τη χρήση της συσκευής με ασφαλή τρόπο και κατανοούν τους σχετικούς κινδύνους.

2. Τα παιδιά δεν πρέπει να παίζουν με τη συσκευή.

3. Ο καθαρισμός και η συντήρηση της συσκευής δεν πρέπει να γίνονται από παιδιά εκτός εάν είναι μεγαλύτερα των 8 ετών και βρίσκονται υπό επίβλεψη.

-
4. Κρατήστε τη συσκευή και το καλώδιό της μακριά από παιδιά ηλικίας κάτω των 8 ετών.
 5. Η συσκευή δεν προορίζεται για λειτουργία με εξωτερικό χρονοδιακόπτη ή με ξεχωριστό σύστημα τηλεχειρισμού.
 6. ή η συσκευή προορίζεται για χρήση σε οικιακές και παρόμοιες εφαρμογές όπως: χώρους κουζίνας προσωπικού σε καταστήματα, γραφεία και άλλους χώρους εργασίας, αγροικίες, από πελάτες σε ξενοδοχεία, μοτέλ και άλλα περιβάλλοντα κατοικιών, όπως περιβάλλοντα Bed & breakfast.
 7. Η συσκευή έχει σχεδιαστεί αποκλειστικά για οικιακή χρήση και για τον προβλεπόμενο σκοπό. Αυτή η συσκευή δεν είναι κατάλληλη για επαγγελματική χρήση.
 8. Μη χρησιμοποιείτε τη συσκευή για κανένα άλλο σκοπό εκτός από αυτόν που περιγράφεται στο παρόν εγχειρίδιο χρήσης.
 9. ⚠ **ΠΡΟΕΙΔΟΠΟΙΗΣΗ:** Βεβαιωθείτε ότι η τάση του δικτύου σας είναι η ίδια με την τάση που αναγράφεται στην ετικέτα χαρακτηριστικών της συσκευής.
 10. ⚠ **ΠΡΟΣΟΧΗ:** Χρησιμοποιείτε τη συσκευή μόνο σε γειωμένη και σωστά εγκατεστημένη πρίζα. **Κίνδυνος ηλεκτροπληξίας!**
 11. Μη χρησιμοποιείτε καλώδιο προέκτασης ή πολύπριζα για να συνδέσετε τη συσκευή.
 12. Μη χρησιμοποιείτε τη συσκευή σε εξωτερικούς χώρους. Κρατήστε τη μακριά από πηγές θερμότητας, άμεσο ηλιακό φως, υγρασία (μην τη βυθίζετε ποτέ σε οποιοδήποτε υγρό) και αιχμηρές άκρες.
 13. ⚠ **ΠΡΟΕΙΔΟΠΟΙΗΣΗ:** Μην τοποθετείτε / χρησιμοποιείτε τη συσκευή κοντά σε εύφλεκτα υλικά ή κοντά σε πηγές θερμότητας όπως ηλεκτρικές εστίες ή εστίες γκαζιού.
 14. ⚠ **ΠΡΟΕΙΔΟΠΟΙΗΣΗ:** Κρατήστε μια επαρκή απόσταση ασφαλείας από τα εύφλεκτα αντικείμενα όπως έπιπλα, κουρτίνες, κ.τ.λ.
-

-
15. **⚠ ΠΡΟΣΟΧΗ:** Μην τοποθετείτε την ηλεκτρική εστία μέσα ή κάτω από ντουλάπια. Η συσκευή δεν έχει σχεδιαστεί για εντοιχισμό.
16. **⚠ ΠΡΟΕΙΔΟΠΟΙΗΣΗ:** Μην τοποθετείτε τα ακόλουθα, παρόμοια ή άλλα εύφλεκτα υλικά όπως χαρτί, πλαστικό κ.λ.π., επάνω ή μέσα στη συσκευή.
17. **⚠ ΠΡΟΕΙΔΟΠΟΙΗΣΗ:** Βεβαιωθείτε ότι το καλώδιο τροφοδοσίας δεν έρχεται σε επαφή με τα ζεστά μέρη της συσκευής ή σε επαφή με αιχμηρές γωνίες και αντικείμενα.
18. Κρατήστε μια επαρκή απόσταση γύρω από όλες τις πλευρές της ηλεκτρικής εστίας για να επιτρέψετε την επαρκή κυκλοφορία του αέρα κατά τη χρήση.
19. **⚠ ΠΡΟΕΙΔΟΠΟΙΗΣΗ:** Μην κλείνετε ή παρεμποδίζετε τις οπές αερισμού της συσκευής.
20. **⚠ ΠΡΟΕΙΔΟΠΟΙΗΣΗ:** Μην τοποθετείτε αλουμινόχαρτο ή παρόμοιο υλικό επάνω στην ηλεκτρική εστία διότι μπορεί να προκληθεί υπερθέρμανση. **Κίνδυνος πυρκαγιάς!**
21. **⚠ ΠΡΟΕΙΔΟΠΟΙΗΣΗ:** Κατά τη διάρκεια της λειτουργίας, η θερμοκρασία της εκτεθειμένης επιφάνειας μπορεί να είναι πολύ υψηλή. Μην αγγίζετε τα μεταλλικά μέρη. Το σύμβολο  σημαίνει ότι η επιφάνεια της συσκευής ενδέχεται να ζεσταθεί κατά τη χρήση. **Κίνδυνος εγκαύματος!**
22. **⚠ ΠΡΟΕΙΔΟΠΟΙΗΣΗ:** Να φοράτε πάντα προστατευτικά γάντια φούρνου όταν εισάγετε ή αφαιρείτε αντικείμενα από την ηλεκτρική εστία.
23. **⚠ ΠΡΟΕΙΔΟΠΟΙΗΣΗ:** Τοποθετήστε τη συσκευή σε μια επίπεδη, σταθερή και ανθεκτική στη θερμότητα επιφάνεια.
24. Μην τοποθετείτε τη συσκευή κοντά σε μέρη που μπορεί να πέσει νερό επάνω της.
25. **⚠ ΠΡΟΣΟΧΗ:** Μη μετακινείτε τη συσκευή κατά τη διάρκεια λειτουργίας της. **Κίνδυνος εγκαυμάτων!**
-

26. Η διάμετρος της βάσης των σκευών που χρησιμοποιούνται πρέπει να ταιριάζει με το μέγεθος της εστίας. Μη χρησιμοποιείτε σκεύη με μεγαλύτερη διάμετρο από την διάμετρο της ηλεκτρικής εστίας.

27. ⚠ **ΠΡΟΕΙΔΟΠΟΙΗΣΗ:** Μη χρησιμοποιείτε την ηλεκτρική εστία χωρίς να υπάρχει μαγειρικό σκεύος επάνω τους. Μη τοποθετείτε τροφές απευθείας επάνω στην ηλεκτρική εστία. **Κίνδυνος πυρκαγιάς!**

28. ⚠ **ΠΡΟΕΙΔΟΠΟΙΗΣΗ:** Δείξτε ιδιαίτερη προσοχή όταν χρησιμοποιείτε δοχεία κατασκευασμένα από οτιδήποτε άλλο εκτός από μέταλλο ή γυαλί.

29. ⚠ **ΠΡΟΣΟΧΗ:** Μην αφήνετε τη συσκευή να λειτουργεί χωρίς επίβλεψη όταν ζεσταίνετε λάδι ή λίπη.

30. ⚠ **ΠΡΟΕΙΔΟΠΟΙΗΣΗ:** Μην αφήνετε τη συσκευή να λειτουργεί χωρίς επίβλεψη. Εάν αποχωρήσετε από το δωμάτιο, αποσυνδέετε πάντα τη συσκευή από την τροφοδοσία.

31. ⚠ **ΠΡΟΕΙΔΟΠΟΙΗΣΗ:** Αποσυνδέετε πάντα τη συσκευή από την τροφοδοσία όταν ολοκληρώσετε τη χρήση. Τραβήξτε το φισ και όχι το καλώδιο.

32. ⚠ **ΠΡΟΕΙΔΟΠΟΙΗΣΗ:** Κατά τον καθαρισμό ή την αποθήκευση, αποσυνδέετε πάντα τη συσκευή από την τροφοδοσία.

33. Η συσκευή πρέπει να ελέγχεται τακτικά για βλάβες.

⚠ **ΠΡΟΕΙΔΟΠΟΙΗΣΗ:** Μη χρησιμοποιείτε τη συσκευή εάν έχει υποστεί κάποια βλάβη.

34. ⚠ **ΠΡΟΣΟΧΗ:** Μη χρησιμοποιείτε τη συσκευή αν το καλώδιο έχει φθαρεί ή αν η συσκευή έχει υποστεί οποιαδήποτε ζημία. Για να αποφύγετε κίνδυνο ηλεκτροπληξίας, μην επιχειρήσετε να επιδιορθώσετε τη συσκευή μόνοι σας. Επικοινωνήστε με έναν εξειδικευμένο τεχνικό για επισκευή. Χρησιμοποιείτε μόνο γνήσια ανταλλακτικά.

35. Οποιαδήποτε παρέμβαση εκτός του καθαρισμού της συσκευής πρέπει να πραγματοποιείται από εξειδικευμένο τεχνικό. **Κίνδυνος ηλεκτροπληξίας!**

36. Μην αφήνετε το καλώδιο τροφοδοσίας να κρέμεται από την άκρη του τραπεζιού ή του πάγκου, ή να έρχεται σε επαφή με καυτές επιφάνειες.

37. Ποτέ μην τραβάτε το καλώδιο, καθώς αυτό μπορεί να καταστρέψει το καλώδιο και να προκληθεί ηλεκτροπληξία.

38. Εάν η επιφάνεια είναι ραγισμένη, αποσυνδέστε τη συσκευή από την τροφοδοσία για να αποφύγετε το ενδεχόμενο ηλεκτροπληξίας.

39. ⚠ **ΠΡΟΣΟΧΗ:** Μην αγγίζετε την ηλεκτρική εστία καθώς η θερμοκρασία της ενδέχεται να είναι υψηλή κατά τη χρήση.

Κίνδυνος εγκαυμάτων!

40. ⚠ **ΠΡΟΣΟΧΗ:** Μη λειτουργείτε τη συσκευή όταν υπάρχει παρουσία ή υποψία παρουσίας εκρηκτικών αερίων ή επικίνδυνων αναθυμιάσεων.

41. Για να εξασφαλίσετε την ασφάλεια των παιδιών, κρατήστε όλα τα υλικά συσκευασίας (πλαστικές σακούλες, κουτιά κ.λπ.) μακριά τους.

⚠ **ΠΡΟΕΙΔΟΠΟΙΗΣΗ:** Μην επιτρέπετε στα παιδιά να παίζουν με τα υλικά συσκευασίας. **Κίνδυνος ασφυξίας!**

42. ⚠ **ΠΡΟΣΟΧΗ:** Η συσκευή αυτή δεν έχει σχεδιαστεί για να βυθίζεται στο νερό κατά τον καθαρισμό. Ακολουθήστε τις οδηγίες που υπάρχουν στην ενότητα "ΚΑΘΑΡΙΣΜΟΣ".

43. ⚠ **ΠΡΟΕΙΔΟΠΟΙΗΣΗ:** Για να αποφύγετε τον κίνδυνο ηλεκτροπληξίας, μη βυθίζετε το καλώδιο, το φις ή την συσκευή σε νερό ή οποιοδήποτε άλλο υγρό.

44. ⚠ **ΠΡΟΕΙΔΟΠΟΙΗΣΗ:** Μην αγγίζετε τη συσκευή με βρεγμένη ή νωπά χέρια.

45. Για να εξασφαλίσετε μεγαλύτερη διάρκεια ζωής της συσκευής, μη την αφήνετε να λειτουργεί για περισσότερο από 2 ώρες συνεχόμενα.

ΠΡΟΕΠΙΣΚΟΠΗΣΗ ΣΥΣΚΕΥΗΣ

1. Ενδεικτική λυχνία λειτουργίας της ηλεκτρικής εστίας
2. Ρυθμιζόμενος θερμοστάτης 5 θέσεων
3. Θερμαινόμενη εστία



ΠΡΙΝ ΤΗΝ ΠΡΩΤΗ ΧΡΗΣΗ

1. Καθαρίστε τη συσκευή όπως αναφέρει η παράγραφος “ΚΑΘΑΡΙΣΜΟΣ”.
2. Τοποθετήστε τη συσκευή σε μια επίπεδη, σταθερή και ανθεκτική στη θερμότητα επιφάνεια.
3. Συνδέστε τη συσκευή σε μια κατάλληλα εγκατεστημένη και γειωμένη πρίζα.
4. Γυρίστε δεξιόστροφα τον ρυθμιζόμενο θερμοστάτη στη μέγιστη θερμοκρασία (θέση 5).
5. Αφήστε την ηλεκτρική εστία να δουλέψει για 3-5 λεπτά.

⚠ ΠΡΟΣΟΧΗ: Αυτή είναι η μοναδική φορά που λειτουργεί η ηλεκτρική εστία χωρίς σκεύος. Πάντοτε πρέπει να χρησιμοποιείτε μαγειρικό σκεύος επάνω στην εστία. Μη χρησιμοποιείτε την ηλεκτρική εστία χωρίς να υπάρχει μαγειρικό σκεύος επάνω της.

6. Γυρίστε αριστερόστροφα το ρυθμιζόμενο θερμοστάτη στην αρχική του θέση (θέση 0) για να απενεργοποιήσετε τη συσκευή.

7. Αποσυνδέστε τη συσκευή από την τροφοδοσία.

ℹ ΣΗΜΕΙΩΣΗ: Όταν χρησιμοποιείται για πρώτη φορά η συσκευή, μπορεί να υπάρξει ελαφρά οσμή ή καπνός. Αυτό είναι φυσιολογικό και δεν επηρεάζει την ασφάλεια της συσκευής σας.

ΧΡΗΣΗ ΤΗΣ ΣΥΣΚΕΥΗΣ

1. Βεβαιωθείτε ότι η συσκευή δεν είναι συνδεδεμένη στην τροφοδοσία και είναι απενεργοποιημένη.
2. Συνδέστε τη συσκευή σε μια κατάλληλα εγκατεστημένη και γειωμένη πρίζα.
3. Γυρίστε δεξιόστροφα τον ρυθμιζόμενο θερμοστάτη για να επιλέξετε το επιθυμητό επίπεδο θερμοκρασίας λειτουργίας. Η κόκκινη ενδεικτική λυχνία λειτουργίας ανάβει.
4. Τοποθετήστε το κατάλληλο μαγειρικό σκεύος επάνω στην ηλεκτρική εστία.


⚠ ΠΡΟΣΟΧΗ: Μην αφήνετε τη συσκευή να δουλεύει χωρίς κανένα μαγειρικό σκεύος επάνω στην εστία. Μπορεί να προκληθεί υπερβολική θερμότητα που μπορεί να οδηγήσει σε βλάβη της συσκευής ή ακόμα και πυρκαγιά.

5. Η ενδεικτική λυχνία λειτουργίας θα σβήσει, μόλις η εστία φτάσει στην επιθυμητή θερμοκρασία.
6. Μόλις ολοκληρωθεί το μαγείρεμα, περιστρέψτε αριστερόστροφα τον ρυθμιζόμενο θερμοστάτη στην αρχική του θέση για να απενεργοποιήσετε την ηλεκτρική εστία.
7. Αποσυνδέστε τη συσκευή από την τροφοδοσία.

8. Πάρτε το μαγειρικό σκεύος επάνω από την εστία.

⚠ ΠΡΟΕΙΔΟΠΟΙΗΣΗ: Πάντα να φοράτε προστατευτικά γάντια κουζίνας όταν χρησιμοποιείτε τη συσκευή. Η συσκευή αναπτύσσει υψηλές θερμοκρασίες κατά τη λειτουργία της. **Κίνδυνος εγκαυμάτων!**

ΣΗΜΕΙΩΣΗ: Για την πιο αποτελεσματική λειτουργία της συσκευής σας, θα πρέπει να χρησιμοποιείτε μαγειρικά σκεύη επίπεδης βάσης, διαμέτρου περίπου 15-17cm και μέγιστης χωρητικότητας 1.0L.

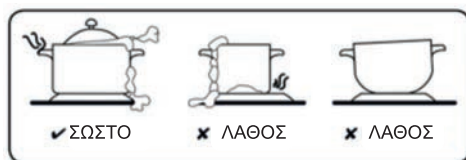

ΚΑΘΑΡΙΣΜΟΣ

1. Πριν από τον καθαρισμό της συσκευής, αποσυνδέετε πάντα τη συσκευή από την τροφοδοσία.
2. Περιμένετε μέχρις ότου η ηλεκτρική εστία κρυώσει πριν την καθαρίσετε.
3. Ποτέ μη βυθίζετε τη συσκευή στο νερό.
4. Καθαρίστε το σώμα της συσκευής με ένα υγρό πανί και με μαλακό απορρυπαντικό οικιακής χρήσης, εάν είναι απαραίτητο.

ΠΡΟΣΟΧΗ: Προσέξτε μην πέσει νερό εντός των αεραγωγών.

5. Αποφεύγετε να χρησιμοποιείτε λειαντικά ή άλλα αιχμηρά αντικείμενα για τον καθαρισμό. Αυτά μπορεί να προκαλέσουν βλάβη στη συσκευή.
6. Μη χρησιμοποιείτε συρμάτινη βούρτσα ή ενισχυμένα καθαριστικά.

ΑΠΟΘΗΚΕΥΣΗ

1. Πριν την αποθήκευση της συσκευής, αποσυνδέετε πάντα τη συσκευή από την τροφοδοσία.
2. Βεβαιωθείτε ότι η συσκευή είναι κρύα και στεγνή πριν την αποθήκευση.
3. Αποθηκεύετε πάντα τη συσκευή μακριά από παιδιά.
4. Αποθηκεύετε πάντα τη συσκευή σε ασφαλές και καθαρό μέρος. Για την καλύτερη προστασία της συσκευής, αποθηκεύστε την μέσα στην αρχική της συσκευασία.



ΑΠΟΡΡΙΨΗ ΣΥΣΚΕΥΗΣ ΚΑΙ ΕΞΑΡΤΗΜΑΤΩΝ

Αυτό το σήμα που εμφανίζεται επάνω στο προϊόν, στα εξαρτήματά του ή στα εγχειρίδια που το συνοδεύουν, υποδεικνύει ότι το προϊόν και τα ηλεκτρονικά του εξαρτήματα δεν θα πρέπει να απορρίπτονται μαζί με τα υπόλοιπα οικιακά απορρίμματα.

Προκειμένου να αποφευχθούν ενδεχόμενες βλαβερές συνέπειες στο περιβάλλον ή την υγεία εξαιτίας της ανεξέλεγκτης διάθεσης απορριμμάτων, σας παρακαλούμε να διαχωρίσετε αυτά τα προϊόντα από άλλους τύπους απορριμμάτων και να τα ανακυκλώσετε.

Οι οικιακοί χρήστες θα πρέπει να έλθουν σε επικοινωνία είτε με το κατάστημα απ' όπου αγόρασαν αυτό το προϊόν, είτε με τις κατά τόπους υπηρεσίες, προκειμένου να πληροφορηθούν τις λεπτομέρειες σχετικά με τον τόπο και τον τρόπο με τον οποίο μπορούν να δώσουν αυτά τα προϊόντα για ασφαλή προς το περιβάλλον ανακύκλωση.

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS.



Read the operating instructions carefully before putting the product into operation and keep the instructions, the receipt and, if possible, the box with the internal packing. If you give this product to other people, please also pass on the operating instructions.

USER MANUAL SYMBOLS

Important information for your safety is specially marked. It is essential to comply with these instructions in order to avoid accidents and prevent damage to the machine:

⚠ WARNING: This sign warns you of dangers to your health and indicates possible injury risks.

⚠ CAUTION: This sign refers to possible hazards to the machine or other objects.

i NOTE: This sign highlights tips and information.

SAFETY INSTRUCTIONS

1. This appliance may be used by children from the age of 8 years and over and by persons with limited physical, sensory or mental abilities or by persons without experience and knowledge, provided that they use it under supervision or have been instructed concerning use of the appliance in a safe way and understand the risks involved.
2. Do not let children play with the appliance.
3. Cleaning and maintenance of the appliance should not be done by children unless they are older than 8 years or under supervision.

-
4. Keep the appliance and its cord out of the reach of children under 8 years old.
 5. Appliance is not intended to operate with an external timer or a separate remote-control system.
 6. This appliance is intended for use in domestic and similar applications such as: staff kitchen areas in shops, offices and other workplaces, farmhouses, by customers in hotels, motels and other residential environments such as Bed & Breakfast environments.
 7. The appliance is designed exclusively for private use and for the envisaged purpose. This appliance is not fit for commercial use.
 8. Do not use the appliance for any purpose other than that described in this user manual.
 9. ⚠ **WARNING:** Check that the voltage indicated on the appliance rating label corresponds to the voltage in the mains.
 10. ⚠ **CAUTION:** Always plug the appliance into an outlet that is earthed. **Risk of electric shock!**
 11. Do not use an extension cable or multi-strips to connect the appliance.
 12. Do not use the appliance outdoors. Keep it away from sources of heat, direct sunlight, humidity (never dip it into any liquid) and sharp edges.
 13. ⚠ **WARNING:** Do not place the appliance on or near flammable material, an electric burner, a heated oven or a hot gas stove.
 14. ⚠ **WARNING:** Keep a safe distance from flammable objects such as furniture, curtains, etc.
 15. ⚠ **CAUTION:** Do not place the appliance inside or under cabinets. Appliance is not designed to be built-in.
 16. ⚠ **WARNING:** Do not place the following or similar materials

near or on the appliance: paper, plastic, cardboard etc.

17.  **WARNING:** Make sure that the power cord does not come into contact with the hot parts of the appliance or comes into contact with sharp corners and objects.

18. Keep a distance around all sides of the appliance in order to allow sufficient air circulation during use.

19.  **WARNING:** Do not cover or block the ventilation holes of the appliance.

20.  **WARNING:** Do not cover any part of the appliance with metal foil or similar material because this may cause overheating of the appliance. **Risk of fire!**

21.  **WARNING:** During operation, the temperature of the exposed surface may be hot. Do not touch the metallic parts. The  symbol means the surfaces are liable to get hot during use. **Risk of burns!**

22.  **WARNING:** Always use protective oven mitts while inserting or removing accessories from the appliance.

23.  **WARNING:** Place the appliance on a flat, stable and heat-resistant surface.

24. Do not operate or place the appliance in places with high humidity or where it may get wet.

25.  **CAUTION:** Do not move the appliance during operation. **Risk of burning!**

26. The diameter of the base of the utensils used must match the size of the hot plate. Do not use utensils with a larger diameter than the diameter of the electric hot plate.

27.  **WARNING:** Do not use the appliance without a cooking utensil on it. Do not place food directly on the hot plate. **Risk of fire!**

28.  **WARNING:** Extreme caution should be exercised when

using containers constructed from other materials than metal or glass.

29. ⚠ **CAUTION:** Do not allow the appliance to operate unattended when heating oil or fat.

30. ⚠ **WARNING:** Do not operate the appliance without supervision. If you should leave the workplace, always unplug the appliance.

31. ⚠ **WARNING:** Unplug the appliance when not in use (pull the plug, not the cable).

32. ⚠ **WARNING:** When cleaning or storing the appliance, switch off the appliance and always pull out the plug from the socket (pull the plug, not the cable).

33. Regularly check the appliance and cable for signs of damage.

⚠ **WARNING:** Do not continue to operate the appliance in case of damage.

34. ⚠ **CAUTION:** Do not operate the appliance with a damaged cord. In order to avoid the risk of an electric shock, never try to repair the appliance by yourself. Bring it to the authorized service station for repair. Use only the original spare parts.

35. Any intervention other than cleaning and normal maintenance must be carried out by an approved service center. **Risk of electric shock!**

36. Do not let the power cord hanging off the edge of a table or bench, or come into contact with hot surfaces.

37. Never pull the cable, as this may damage the cable and cause electric shock.

38. If the surface is cracked, disconnect the appliance from the power supply to avoid electric shock.

39. ⚠ **CAUTION:** Do not touch the electric hot plate as its temperature may be high during use. Risk of burns!

40. ⚠ **CAUTION:** To protect against fire, do not operate in the presence of explosive and / or flammable fumes.

41. In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.

⚠ **WARNING:** Do not allow children to play with the packaging materials. **Risk of suffocation!**

42. ⚠ **CAUTION:** Never immerse the appliance into water during cleaning. Check "CLEANING" paragraph for cleaning instructions.

43. ⚠ **WARNING:** To avoid the risk of electric shock, do not immerse the cord, plug or unit in water or any other liquid.

44. ⚠ **WARNING:** Do not touch the appliance with wet or damp hands.

45. To prolong the lifetime of your product, do not operate for more than 2 hours continuously. You must leave the hot plate to cool down for at least half an hour before switching on the hot plate again.

PARTS IDENTIFICATION

1. Power light indicator
2. 5-positions adjustable thermostat
3. Hot plate



BEFORE FIRST USE

1. Clean the appliance as described in the "CLEANING" paragraph.
2. Place the device on a flat, stable and heat-resistant surface.
3. Plug the appliance in a properly installed and grounded outlet.
4. Turn the adjustable thermostat knob clockwise to the maximum temperature (position 5).
5. Let the appliance operate for 3-5 minutes.

⚠ **CAUTION:** This is the only time you will operate the appliance without a pan. You should always use cookware on the appliance. Do not use the electric hot plate without cookware on it.

6. Turn the adjustable thermostat knob counterclockwise to its original position to turn off the appliance.

7. Unplug the appliance.

i NOTE: When the device is first used, there may be a slight odor or smoke. This is normal and

does not affect the security of your device.

OPERATION OF THE APPLIANCE


1. Make sure that the appliance is not connected to the power supply and is switched off.
2. Plug the appliance in a properly installed and grounded outlet.
3. Turn clockwise the thermostat knob to select the desired operating temperature level. Red indicator light will turn on.
4. Place the cookware on the hot plate.

⚠ CAUTION: Do not allow the appliance to operate without any cookware on the hot plate. Excessive heat can lead to electric burners or even fire!

5. Indicator light will go off when the hot plate reached the selected temperature level.
6. When cooking is finished, turn anti-clockwise the thermostat knob to the off position.
7. Unplug the appliance.
8. Take the cookware from the hot plate.

⚠ WARNING: Always wear protective cooking mitts when using the appliance. The device develops high temperatures during operation. Risk of burns!

i NOTE: For the most efficient operation of the appliance, flat base cooking utensils shall be used with a diameter of approximately 15-17cm and a maximum capacity of 1.0L.

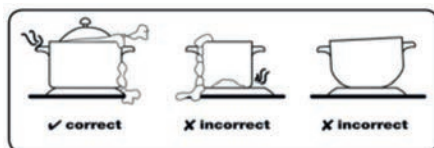

CLEANING

1. Always unplug the appliance before cleaning it.
2. Allow the appliance to cool down before cleaning.
3. The appliance should not be immersed in water for cleaning.
4. Clean the appliance housing with a cloth dampened in warm water and washing up liquid, if it is needed.

⚠ CAUTION: Do not pour water inside the air ventilation holes.

5. Do not use anything abrasive that can scratch or damage the appliance.
6. Do not use a wire brush or other abrasive utensils for cleaning.

STORAGE

1. Always unplug the appliance before storing it.
2. Always make sure that the appliance is cold, dry and clean before storing.
3. Always store the appliance out of the reach of children.
4. Always store the device in a safe and clean place. For the better protection of the appliance, store it in its original packaging.



DISPOSAL OF APPLIANCE AND ACCESSORIES

This symbol appearing on the product, its accessories or accompanying manuals indicates that the product and its electronic accessories should not be disposed of with other

household trash.

In order to avoid possible harmful effects on the environment or health due to uncontrolled waste disposal, please separate these products from other types of waste and recycle them.

Household users should contact either the store where they purchased this product or their local services for details of where and how they can return these products for environmentally safe recycling.

Made in China



Ιωνίας Καλοχώρα, 570 09 Θεσσαλονίκη, Ελλάδα, ΤΗΛ. +30 2310 700.777
Ionias Kalochori, 570 09 Thessaloniki, Greece, TEL. +30 2310 700.777
e-mail: info@sun.gr - www.life.gr